


REVISIONS

ZONE	REV	DESCRIPTION	DATE	APPROVED
------	-----	-------------	------	----------

CONNECTOR DISASSEMBLY

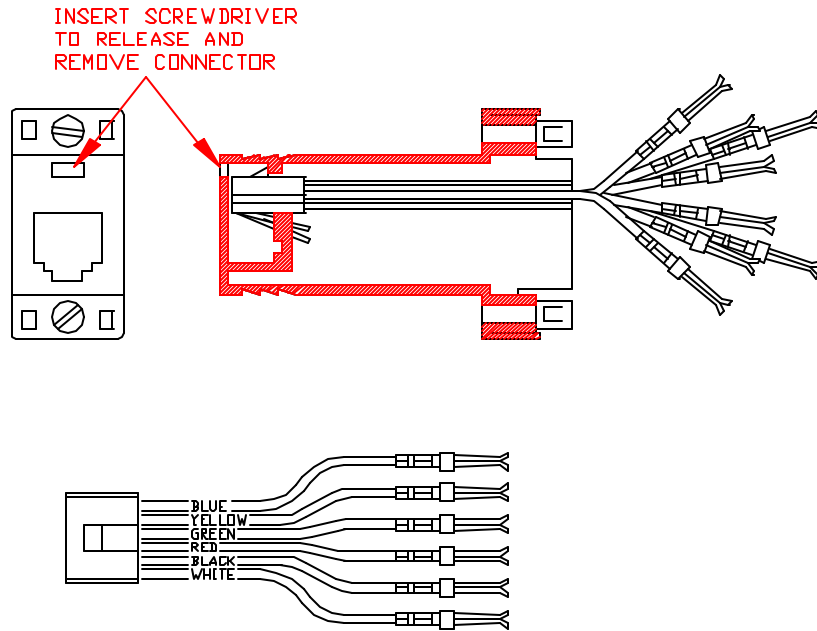

PACKAGING INSTRUCTIONS FOR -2 AND -4:

1. PACKAGE CONNECTOR(S) AND CABLE INTO WURZBURG BOX NUMBER S12W (2 X 2 X 4)
2. CLOSE BOX AND APPLY PRODUCT DESCRIPTION LABEL TO OUTSIDE OF BOX.

4	HAI COMM CABLE - LT TO SERIAL PCA - SALABLE KIT
3	HAI COMM CABLE CONNECTOR - SERIAL PCA SIDE
2	HAI COMM CABLE - LT TO PC - SALABLE KIT
1	HAI COMM CABLE CONNECTOR - COMPUTER SIDE

DASH #	DESCRIPTION
--------	-------------





HOME AUTOMATION, INC.  
 2709 Ridgelake Dr. Metairie, La. 70002

COMMUNICATION CABLE ADAPTOR

This drawing is the property of Home Automation, Inc. Any reproduction without written consent is prohibited.


SIZE A	DRAWING NO. 21A05	REV A
SCALE NONE	DATE 07-21-00	SHEET 1 OF 3

# FOR -1 COMPUTER SIDE

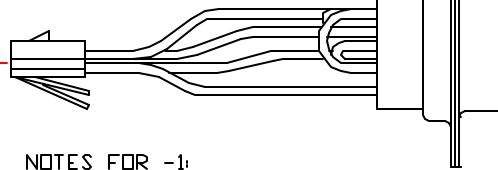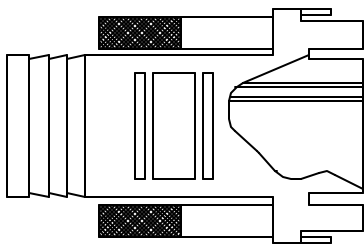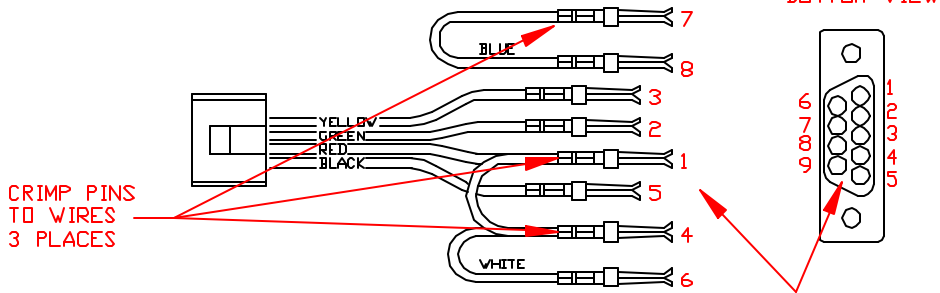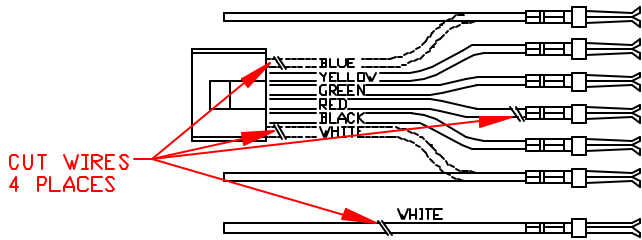

## NOTES FOR -1:

1. INSERT SMALL BLADE SCREWDRIVER INTO SLOT IN HOUSING, DISENGAGE CONNECTOR AND REMOVE FROM HOUSING.
2. CUT WHITE AND BLUE WIRE AT THE POINT WHERE THE WIRE EXITS THE CONNECTOR.
3. CUT PIN OFF OF RED WIRE LEAVING RED WIRE AS LONG AS POSSIBLE STRIP THE CUT END.
4. CUT WHITE WIRE IN HALF
5. STRIP THE CUT END OF THE BLUE WIRE AND CRIMP PIN TO THIS END.
6. STRIP ENDS OF WHITE WIRE(S) AND CRIMP TOGETHER WITH RED WIRE AS SHOWN.
7. INSERT PINS INTO DB-9 CONNECTOR UNTIL THEY SNAP IN PLACE AS SHOWN.
8. SLIDE CONNECTOR BACK INTO HOUSING UNTIL IT SNAPS INTO PLACE AS SHOWN.
9. SNAP DB-9 CONNECTOR INTO HOUSING. BE CAREFUL NOT TO PINCH WIRES.
10. APPLY LABEL TO HOUSING.

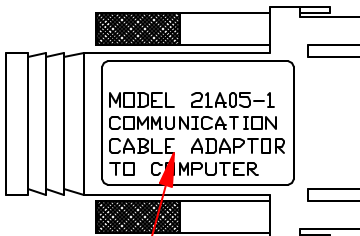


APPLY LABEL  
HERE


This drawing is the property of Hone Automation, Inc. Any reproduction without written consent is prohibited.

SIZE A	DRAWING NO. 21A05	REV A
SCALE NONE	DATE 07-21-00	SHEET 2 OF 3



# FOR -3 SERIAL PCA SIDE

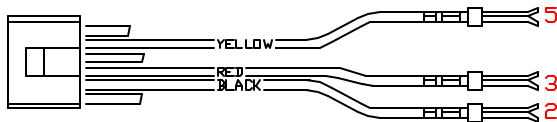

DB9-FEMALE  
BOTTOM VIEW



INSERT PINS INTO  
DESIGNATED POSITION  
ON CONNECTOR

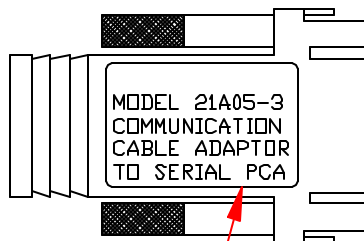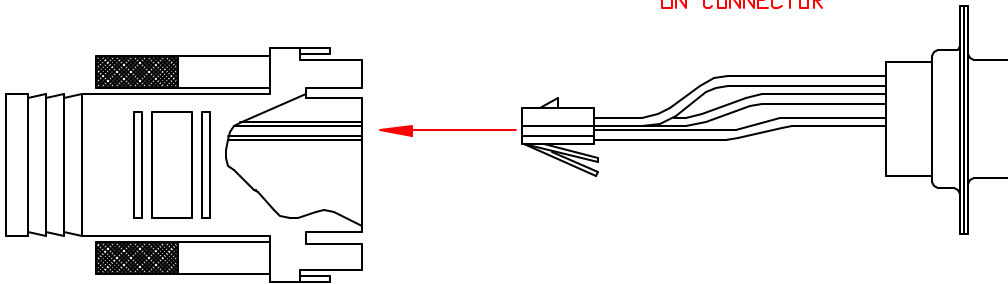

APPLY LABEL  
HERE

## NOTES FOR -3:

1. INSERT SMALL BLADE SCREWDRIVER INTO SLOT IN HOUSING, DISENGAGE CONNECTOR AND REMOVE FROM HOUSING.
2. CUT WHITE, BLUE AND GREEN WIRE AT THE POINT WHERE THE WIRE EXITS THE CONNECTOR.
3. INSERT PINS INTO DB-9 CONNECTOR UNTIL THEY SNAP IN PLACE AS SHOWN.
4. SLIDE CONNECTOR BACK INTO HOUSING UNTIL IT SNAPS INTO PLACE AS SHOWN.
5. SNAP DB-9 CONNECTOR INTO HOUSING. BE CAREFUL NOT TO PINCH WIRES.
6. APPLY LABEL TO HOUSING.

This drawing is the property of Hame Automation, Inc. Any reproduction without written consent is prohibited.

SIZE  
A

DRAWING NO.

21A05

REV  
A

SCALE

NONE

DATE

07-21-00

SHEET

3 OF

3